

twilight

INSTRUMENTOS DE MEDICIÓN INDUSTRIAL

**Medidor de tensión de cuerda ASZ Carga máxima:
20KN, 50KN, 100KN y 200KN Nambei
NE-ASZ**

www.twilight.mx

 / [twilightsadecv](https://www.facebook.com/twilightsadecv)

 / [twilightsadecv](https://www.twitter.com/twilightsadecv)

 / [twilightsadecv](https://www.youtube.com/twilightsadecv)

ASZ Rope Tension Tester User Manual

■ Summary:

1.1 Main usage and application

Rope Tension Testing Instrument can be applied to various occasions, such as power industry, telecommunications industry, transportation industry, glass curtain wall decoration, cable way industry, construction industry, pleasure grounds, tunnel construction, fishing, major research institutions and teaching institutions, testing institutions and other occasions involved with the tension of ropes and steel wire ropes.

1.2 Product characteristics

- ❖ It has the rope structure with tension force, and can directly measure without disassembly.
- ❖ It has the light weight, simple structure, convenient operation, and applies to any situations.
- ❖ It has the stable performance, high measurement accuracy, with automatic system compensation function. When the specification of the tested rope the same as the rope tension testing instrument rope number, the measurement accuracy can reach 3% error or less within the rated measurement range.
- ❖ It has broader range of measurement, with 19 kinds of rope diameter measuring functions.
- ❖ Applied range: applied to flexible, stretched ropes, such as various steel wire ropes, high-strength ropes etc.
- ❖ Accuracy grade: 3~6% of maximum function (depending on the rope form and features).
- ❖ Rope Diameter: $\phi 6 \sim \phi 40$ mm.

1.3 Specifications and model

Model	ASZ-20KN							
Number	1	2	3	4	5	6	7	8
Diameter	$\Phi 6$	$\Phi 8$	$\Phi 9$	$\Phi 10$	$\Phi 12$	$\Phi 14$	$\Phi 16$	$\Phi 18$
Load division value (KN)	0.01							
Output connector	Rs232 9-hole socket							
Power	Rechargeable battery charger (charging voltage 100V~240V)							
Working temperature	5°C~35°C							
Transport temperature	-10°C~60°C							
Relative humidity	15%~80%RH							
Working environment	No vibration focus and corrosive media around							
Net weight	4.7kg							
Dimension	650×375×100 (mm)							


Model	ASZ-50KN							
Number	1	2	3	4	5	6	7	8
Diameter	Φ12	Φ14	Φ16	Φ18	Φ20	Φ22	Φ24	Φ26
Load division value (KN)	0.01							
Output connector	Rs232 9-hole socket							
Power	Rechargeable battery charger (charging voltage 100V~240V)							
Working temperature	5°C~35°C							
Transport temperature	-10°C~60°C							
Relative humidity	15%~80%RH							
Working environment	No vibration focus and corrosive media around							
Net weight	4.7kg							
Dimension	650×375×100 (mm)							

Model	ASZ-100KN							
Number	1	2	3	4	5	6	7	8
Diameter	Φ20	Φ22	Φ24	Φ26	Φ28	Φ30	Φ32	Φ34
Load division value (KN)	0.1							
Output connector	Rs232 9-hole socket							
Power	Rechargeable battery charger (charging voltage 100V~240V)							
Working temperature	5°C~35°C							
Transport temperature	-10°C~60°C							
Relative humidity	15%~80%RH							
Working environment	No vibration focus and corrosive media around							
Net weight	7kg							
Dimension	650×375×100 (mm)							


Model	ASZ-200KN							
Number	1	2	3	4	5	6	7	8
Diameter	Φ26	Φ28	Φ30	Φ32	Φ34	Φ36	Φ38	Φ40
Load division value (KN)	0.1							
Output connector	Rs232 9-hole socket							
Power	Rechargeable battery charger (charging voltage 100V~240V)							
Working temperature	5°C~35°C							
Transport temperature	-10°C~60°C							
Relative humidity	15%~80%RH							
Working environment	No vibration focus and corrosive media around							
Net weight	7kg							
Dimension	650×375×100 (mm)							

1.4 The Working Principle

The determination of rope force is classified into two types: intrusive and non-intrusive. The so-called intrusive force test refers to that at the ends of or in the middle of the rope, after having it cut, attach it to a pull sensor, and read out the rope force directly, which is one of the most accurate and visualized method of measuring force, as is shown in the following diagram 1 and 2.

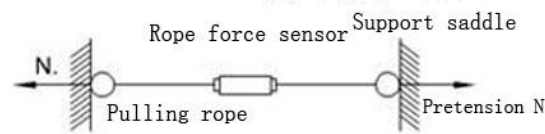

(Diagram 1)

 


(Diagram 2)

This force testing method requires large investment; only applies to pilot studies and a few projects that have huge tonnage and high requirements. It does not apply to pre-stressed structural projects with large amount of rope layout.

The non-intrusive force measuring method is also divided into two kinds, one is the vibration frequency measurement method, namely, there are function relations between the rope self-vibration period T and the rope inner tension H , between the rope length L and the rope quality W . Through the formula it can be known that if the rope vibration period T is measured, the rope inner tension H can be calculated. The principle is relatively simple, but in the process of transforming the vibration into signals, and then exporting rope pull value through computer processing, more instruments and equipment are required and it is more difficult for workers to grasp. Besides, it is inconvenient for high-altitude operations. In addition, the supporting conditions at the rope ends have influence on the vibration cycle, and also on the force measurement accuracy. Another principle of rope force

measurement is based on principles of mechanics. As is shown in the following diagram, there are function relations between the horizontal displacement δ of rope force and the pull H , between the horizontal force P and the length of the rope. Under the condition that displacement keeps a certain values, the more the rope pull H , the greater the horizontal force P .

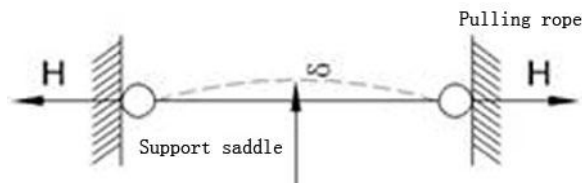


(Diagram 3)

Using force sensor output the horizontal force P , after the microprocessor treatment into force, liquid Crystal Display: The above principle is also relatively simple, but the relation between the horizontal force and the rope force, is still relevant to the rope diameter, the cross-section structure, the rope extending rate and the degree of the pull. We can obtain exact and stable rope force through amendments of the microprocessor and precise calibration and so forth. It has reached the level of similar foreign products through trial and testing.


■ The product structure

2.1 Outline structure

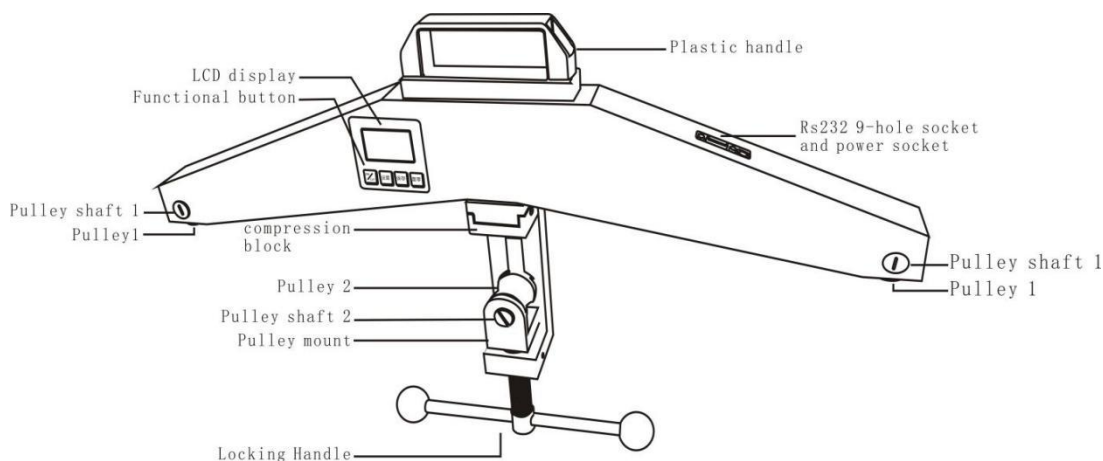

(Diagram 4)

2.2 LCD screen function

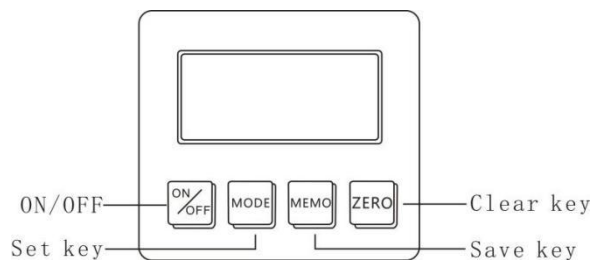

(Diagram 5)

2.2.1 ON/FF: Press ON/FF ,the power turn on or off.

2.2.2 MODE: When in measuring interface ,press “MODE”key to enter into setting interface;when in

setting interface, the “MODE” button can be used for saving.

2.2.3 MEMO: When in measuring interface,it can be used for data storage.

If the user save data before,when the user press “MEMO” button in measuring interface,the screen will display “MEM”, if not ,it will not disappear. Press “MEMO” key for 5 seconds,the stored data can be viewed. When in setting interface ,it can be used as” move up” function .

2.2.4 Zero: When in measuring interface,press “Zero” button to clear the data on the screen.

When in setting interface ,the button used as return.

■ USAGE AND OPERATION

3.1 Arrangement and check before using

3.1.1 Check the battery ,if not enough ,need to charge first.

3.2 The operation and instruction in use

3.2.1 **UNIT** (UNIT) Unit setting: Turn on ,into measuring interface,Press“MODE”key into setting interface, press “ MODE” key again to enter into unit setting , press “MEMO” button to choose unit , choose the unit you need , press “MODE” key for saving and return to setting interface. Show as the picture 6 shows:



(diagram 6)

3.2.2 **PEAK** (PEAK) PEAK setting: After last step,press “MEMO” button to choose “PEAK”,and then press “SET” to enter into PEAK setting , PRESS “MEMO” button in peak mode .No display on the screen (means real-time measuring mode) . Two mode alternative, choose the mode you need ,and then press “MODE” key for saving,show as the picture 7 below:



(diagram 7)

3.2.3 *H ldr* (HIDT) Upper limit value setting: Press “MODE” button to enter into upper limit value setting , press “MEMO”“ZERO” button respectively to adjust number, choose the number you need and then press “MODE” button for saving,show as the picture 8 show below:




(diagram 8)

3.2.4 *Lodi* (LODT) Lower limit value setting: Press “MODE” key to enter into lower limit value setting , press “MEMO”“ZERO” button respectively ,choose the number you need and then press “MODE” button for saving . Same as upper limit value setting shows.

3.2.5 *LoStl* (LOSET) Peak min. Storage value: In peak mode ,when the peak value is less than peak min. storage value ,the peak can not be saved,when enter into “peak min. Storage value “ interface, press “MEMO”“ZERO” respectively, to adjust number,choose the value you need ,and then press “MODE” for saving.

3.2.6 *offt* (OFFT) Auto-shut down time setting: when in this setting program , press “MEMO” “ZERO” button to number adjustment , choose the number you need and then press”MEMO” for saving .It can setting auto shut down between 0 min to 9999 min., it can be also set“0000”for not auto shut down. If you choose not auto-shut down , after set "0000" and then press "MODE" to complete. In the meanwhile it turn back to setting item interface .The instrument default shut-down time is 30 minutes.

 3.2.7 *ASZ NO* (ASZ NO) Cable number selection: Turn on and enter into measuring interface,and press “MODE” button into setting interface ,and choose the cable number you need ,and press “MEMO” for saving ,the instrument auto-shut down. Restart if use it .Show as the picture 9 shows:



(diagram 9)

3.2.8 **ሃኔቲ** (G.SET) Gravity acceleration setting: The user can set the gravity acceleration value according to local area, the default value is 9.800.

3.2.9 **ባከር ኔቲ** (BACSET) Backlight function setting: Under this setting item, if choose “**ሃይ** (YES)” indicates the backlight function is on, if you choose “**ብል** (NO)” indicates the backlight function is off, after selection, press “MODE” key for saving and back to setting item interface.

3.2.10 **ሪፔት** (RESET) Restore factory setting: Under this setting item, press “MODE” button to back to factory setting, the machine off. Re-start to use it.

■ **Testing**

4.1 According to the diameter of the wire rope to select the cable number

Cable number selection standard correspondence table


ASZ-20		ASZ-50		ASZ-100		ASZ-200	
Cable Number	Diameter	Cable Number	Diameter	Cable Number	Diameter	Cable Number	Diameter
1	φ6	1	φ12	1	φ20	1	φ26
2	φ8	2	φ14	2	φ22	2	φ28
3	φ9	3	φ16	3	φ24	3	φ30
4	φ10	4	φ18	4	φ26	4	φ32
5	φ12	5	φ20	5	φ28	5	φ34
6	φ14	6	φ22	6	φ30	6	φ36
7	φ16	7	φ24	7	φ32	7	φ38
8	φ18	8	φ26	8	φ34	8	φ40

Special wire ropes can be calibrated according to customer’s requirements.

Note: In testing, put the top point towards the positioned block, and press the tested wire rope on the compression block tightly.

4.2 Loosen the locking handle, put the wire rope into the instrument (The pulley should be in full contact with the wire rope), tighten the locking handle so that the pulley seat move upwards to press the tested wire rope tightly, so that the wire rope can be full contact with compression block, Show as the picture 10. Enter into “PEAK” setting to choose measuring mode.

4.3 Tighten the handle, put the wire rope into the compression block tightly, the value show on the screen is the tension force.

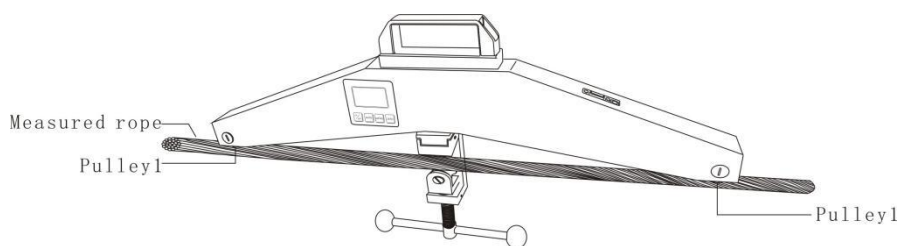

(picture 10)

■ Maintain & Repair

5.1 Daily maintain, repair and calibration

5.1.1 Please use the matching charger for charging, otherwise, it will cause circuit failure, or even a fire.

5.1.2 Do not use the power supply beyond the rated voltage of the charger, or it may cause electric shock or fire.

5.1.3 Do not plug or unplug with wet hands, or it may cause an electric shock. ◦

5.1.4 Do not pull or drag the power wire to unplug the charger plug, in order to avoid the electric shock caused by breaking the wire.

5.1.5 Please use soft cloth to clean the instrument. Immerse the cloth into the water containing detergent, wring it dry and then clean up the dust and dirt.

5.1.6 Do not use volatile chemicals to clean the instrument (such as volatile agent, thinner, alcohol, etc.)

5.2 Maintain and repair in use

5.2.1 Do not use this instrument beyond the maximum measurement range. Otherwise, it may lead to sensor damage, or even accidents.

5.2.2 When the test value exceeds the measurement range, the buzzer will ring continuously, and at this moment please remove the load quickly or reduce the load.

5.3 Maintain and repair in long-term stop in use

5.3.1 Please operate and stock the instrument under the prescribed temperature and humidity, or it may result in equipment failure.

■ Packing list

6.1 ASZ Packing list

User manual	1
Check certificate	1
Warranty card	1
Certificate	1
software	1
charger	1
Aluminum key	1
Rs232 cable	1
Tension meter	1
Aluminum box	1
Dryer	1

twilight

INSTRUMENTOS DE MEDICIÓN INDUSTRIAL



LLÁMANOS

+52(81) 8115-1400 / +52 (81) 8173-4300

LADA Sin Costo:
01 800 087 43 75

E-mail:
ventas@twilight.mx

www.twilight.mx



/ [twightsadecv](https://www.facebook.com/twightsadecv)



/ [twightsadecv](https://twitter.com/twightsadecv)



/ [twightsadecv](https://www.youtube.com/twightsadecv)