

# twilight

INSTRUMENTOS DE MEDICIÓN INDUSTRIAL

## Termohigrometro PC-PRHTEMP

[www.twilight.mx](http://www.twilight.mx)

 / [twightsadecv](https://www.facebook.com/twightsadecv)


 / [twightsadecv](https://twitter.com/twightsadecv)

 / [twightsadecv](https://www.youtube.com/twightsadecv)

Description	PRHTemp2000
Temperature Sensor	Semiconductor
Temperature Range	-20 °C to +60 °C (-4 °F to +140 °F)
Temperature Resolution	0.1°C (0.18°F)
Calibrated Accuracy	+0.5 °C/+0.9 °F (0 °C to 50 °C/32 °F to 122 °F)
Pressure Sensor	Semiconductor (Strain Gauge)
Pressure Range	0 to 30 PSIA
Pressure Resolution	0.002PSIA
Calibrated Accuracy	+1.0%FSR; 0.25% at 25 °C
Humidity Sensor	Internal Semiconductor
Humidity Range	0%RH to 95%RH
Humidity Resolution	0.1%RH
Calibrated Accuracy	+3%RH (2%RH @ 25 °C Typical)
Memory	87,381/channel
Reading Rate	1 reading every 2 seconds up to 1 reading every 24 hours
Required Interface Package	IFC200
Baud Rate	115,200
Typical Battery Life	1 year with display off, 30 days with continuous LCD and no backlight
Operating Environment	-20 °C to +60 °C (-4 °F to +140 °F), 0%RH to 95%RH (non-condensing)
Material	Black anodized aluminum
Dimensions	4.8 in x 3.3 in x 1.25 in (122 mm x 84 mm x 32 mm)
Weight	16 oz (440 g)
Approvals	CE

#### Battery Warning

**WARNING: DISCARD USED BATTERY PROMPTLY. KEEP OUT OF REACH OF CHILDREN. DO NOT DISPOSE OF IN FIRE, RECHARGE, PUT IN BACKWARDS, DISASSEMBLE, OR MIX WITH OTHER BATTERY TYPES. MAY EXPLODE, FLAME, OR LEAK AND CAUSE PERSONAL INJURY.**

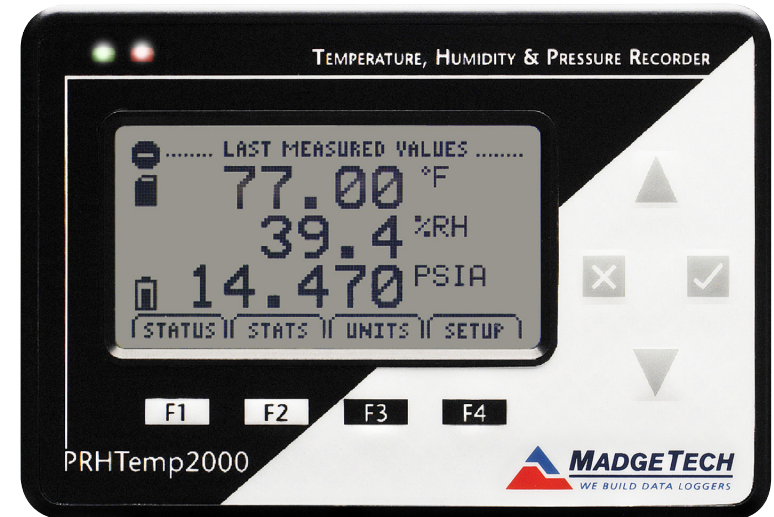

#### PRHTemp2000

Pressure, Humidity and Temperature Recorder with LCD

## Product Notes

### Getting Started

The PRHTemp2000 is a pressure, temperature and humidity data logger with LCD display. The convenient LCD provides access to the current pressure, temperature and humidity readings, as well as minimum, maximum and average statistics.

For additional information refer to your PRHTemp2000 manual and “Data Logger & Software Operating Manual”.

### Backlight

The backlight uses a significant amount of battery life. Refer to the manual to configure the auto shut-off when not in use.

### Set Password

To password protect the device so that others cannot start, stop or reset the device;

- In the Connected Devices panel, click the device desired.
- On the Device Tab, in the Information Group, click Properties. Or, right-click the device and select Properties in the context menu.
- On the General Tab, click Set Password.
- Enter and confirm the password in the box that appears, then select OK.

## Installation Guide

### Installing the Interface cable

- IFC200
- Insert the device into a USB port. The drivers will install automatically.

### Installing the software

The Software can be downloaded from the MadgeTech website at the following link: [www.madgetech.com/software-download](http://www.madgetech.com/software-download). Follow the instructions provided in the Installation Wizard.

## Device Operation

### Connecting and Starting the data logger

- Once the software is installed and running, plug the interface cable into the data logger.
- Connect the USB end of the interface cable into an open USB port on the computer.
- The device will appear in the Connected Devices list, highlight the desired data logger.
- For most applications, select “**Custom Start**” from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click “**Start**”. (“**Quick Start**” applies the most recent custom start options, “**Batch Start**” is used for managing multiple loggers at once, “**Real Time Start**” stores the dataset as it records while connected to the logger.)
- The status of the device will change to “**Running**”, “**Waiting to Start**” or “**Waiting to**

**Manual Start**”, depending upon your start method.

- Disconnect the data logger from the interface cable and place it in the environment to measure.

*Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.*

### Downloading data from a data logger

- Connect the logger to the interface cable.
- Highlight the data logger in the Connected Devices list. Click “**Stop**” on the menu bar.
- Once the data logger is stopped, with the logger highlighted, click “**Download**”. You will be prompted to name your report.
- Downloading will offload and save all the recorded data to the PC

## Device Maintenance

### Battery Replacement

3/32” HEX Driver (Allen Key)

Replacement Battery (U9VL-J)

- Remove the back cover from the device by unscrewing the four screws.
- Remove the battery from its compartment and unsnap it from the connector.
- Snap the new battery into the terminals and verify it is secure.
- Replace the cover taking care not to pinch the wires. Screw the enclosure back together securely.

*Note: Be sure not to over tighten the screws or strip the threads.*

### Recalibration

The PRHTemp2000 standard calibration is one point at 25 °C, two points at 25%RH and 75%RH and two points at 14.7 PSI and 30 PSI.



INSTRUMENTOS DE MEDICIÓN INDUSTRIAL



LLÁMANOS

**+52(81) 8115-1400 / +52 (81)  
8173-4300**

**LADA Sin Costo:  
01 800 087 43 75**

**E-mail:  
ventas@twilight.mx**

**www.twilight.mx**



/ twilightsadecv



/ twilightsadecv



/ twilightsadecv