

twilight

INSTRUMENTOS DE MEDICIÓN INDUSTRIAL

**Refractómetro para muestras de alta
temperatura
AT-MASTER80H**

www.twilight.mx

 / [twightsadecv](https://www.facebook.com/twightsadecv)

 / [twightsadecv](https://twitter.com/twightsadecv)

 / [twightsadecv](https://www.youtube.com/twightsadecv)

8. Brix Scale


All refractometers are designed to measure the refractive index of a solution. The Brix scale is based on a sucrose (sugar) and water solution. However, since most samples contain substances other than sugar - such as salts, minerals and proteins - the Brix percentage represents the total concentration of all soluble solids in the sample. For certain samples, such as cutting oils and other industrial fluids, a conversion chart from the Brix percentage to the sample's total concentration may be necessary.

9. When moisture accumulates in the eyepiece

If the view of the scale and boundary line becomes obstructed by moisture within the eyepiece, follow the instructions below for proper cleaning:

- While holding the eyepiece toward you, turn the eyepiece counter-clockwise until it can be removed.
- Gently wipe the two areas indicated by the arrows in the figure with a clean, dry cloth to remove any moisture.
- Replace the eyepiece and secure by turning in a clockwise direction.

※MASTER-H series are water-resistant rated (JIS-C0920 5th grade jet proof type, IEC specification 529, IP65), however the eyepiece section is not water-resistant.

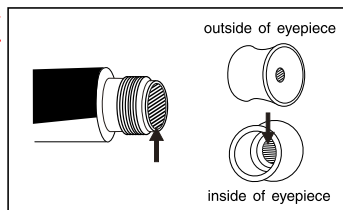

10. Repair and warranty

The MASTER-H series are warranted for one year after the date of purchase against any manufacturer defect in materials or workmanship. Prism and sample stage are excluded from the warranty. Any of the following events happening to the unit will void the warranty:

- Disassembled by anyone other than authorized service provider
- Immersed in liquid or dropped
- Misused, abused, or used/stored in improper ambient conditions

Service fees are applicable for repairs after the warranty period expires. Contact an authorized ATAGO Service Center or the original seller for details.

Have the serial number of your refractometer available when asking about repair.

11. Specifications

	MASTER-50H (Cat.No.2354)	MASTER-80H (Cat.No.2364)	MASTER-93H (Cat.No.2374)	MASTER-100H (Cat.No.2384)
Measurement range	Brix 0.0 to 50.0%	Brix 30.0 to 80.0%	Brix 45.0 to 93.0%	Brix 60.0 to 100.0%
	(Automatic Temperature Compensation)			
Minimum scale	Brix 0.5%			
Accuracy	Brix $\pm 0.5\%$ (10 to 30°C)	Brix $\pm 0.5\%$ (10 to 40°C)		
Repeatability	Brix $\pm 0.25\%$			
International Protection class	IP65 Water Resistant (except eyepiece)			
Size and weight	3.2 x 3.4 x 16.8cm, 130g			

Design Registration No.000379326-0001, 000379326-0002 (EU), ZL 2005 3 0116403.4,5 (China), D111526 (Taiwan), D554, 549 (U.S.A.) 1255763, 1255764, 1255765, 1255766, 1255767 (Japan) Patent Granted in countries around the world.

ATAGO CO., LTD.

Headquarters: The Front Tower Shiba Koen
23rd Floor 2-6-3 Shiba-koen, Minato-ku
Tokyo 105-0011, Japan
TEL: 81-3-3431-1943 FAX: 81-3-3431-1945
overseas@atago.net http://www.atago.net/

ATAGO U.S.A., Inc.

11811 NE First Street, Suite 101,
Bellevue, WA 98005 U.S.A.
TEL: 1-425-637-2107 FAX: 1-425-637-2110
customerservice@atago-usa.com

ATAGO INDIA Instruments Pvt. Ltd.

TEL: 91-22-28544915 / 40713232
customerservice@atago-india.com

ATAGO THAILAND Co., Ltd.

TEL: 66-21948727-9, 66-21171549
customerservice@atago-thailand.com

ATAGO BRASIL Ltda.

TEL: 55 16 3913-8400
customerservice@atago-brasil.com

ATAGO ITALIA s.r.l.

TEL: 39 02 36557267
customerservice@atago-italia.com

ATAGO CHINA Guangzhou Co., Ltd.

TEL: 86-20-38108256
info@atago-china.com

ATAGO RUSSIA Ltd.

TEL: 7-812-777-96-96
info@atago-russia.com

ATAGO NIGERIA Scientific Co., Ltd.

TEL: 234-707-558-1552
atagonigeria@atago.net

1802K Printed in Japan



2354-E08

The warranty period extension method 1 year → 2 years

The warranty period will be extended from 1 year to 2 years when you register customer information.
Trouble scanning the code? Access this link <http://www.atago.net/ur/>



QR code

MASTER SERIES REFRACTOMETER

(Water Resistant & Automatic
Temperature Compensation)

MASTER-H series

INSTRUCTION
MANUAL

MASTER-50H (Cat.No. 2354, Brix 0.0 to 50.0%)

MASTER-80H (Cat.No. 2364, Brix 30.0 to 80.0%)

MASTER-93H (Cat.No. 2374, Brix 45.0 to 93.0%)

MASTER-100H (Cat.No. 2384, Brix 60.0 to 100.0%)

Check Point To ensure your refractometer continues to operate properly and look new for a long time!

When measuring samples with a high salt content, be sure to clean the refractometer by wiping the unit completely after each use, especially the metal areas. The unit should be stored in the ATAGO storage box provided when not in use.

Thank you for your purchase of a quality ATAGO product.

To register your new instrument, please complete the Product Registration & Warranty information at:
www.atago.net/registration/

By registering your instrument, we will be able to better serve and support your future needs.
光... Capture the Light, Measure the Future!

1. Names and functions of main parts



Memo The eyepiece and daylight plate are user replaceable.
Please contact an ATAGO distributor to place an order or for any inquiries.

Name	Part #
Eyepiece	RE-2311-12M
Daylight plate	RE-2315-60M
Small volume daylight plate	RE-2311-67M

ATAGO instruments are rigorously inspected to ensure each unit meets the highest standards of quality assurance.

PRECAUTIONS

(Be sure to read the following before use.)

Warning!


When using this instrument to measure solutions which may be harmful to humans, please handle all materials carefully, using the proper gloves and mask. Please be aware of any special handling instructions for any harmful solution.

Caution


- Carefully read the instruction manual of this instrument to ensure proper use and operating methods.
- When handling and carrying this instrument, avoid dropping or subjecting to any strong shock or excessive force.
- If this instrument is used for any application other than its intended purpose, ATAGO will not be held liable for any damage caused by the use of or the measurement(s) obtained by the operator.
- ATAGO is not liable for any loss and damage caused by the measurement and use of this instrument.
- The prism is considered a consumable item and a charge will be incurred for the replacement of this part.
- All instruments received for repair are subject to a possible inspection fee. ATAGO does not warrant the problems which are caused by user's fault even though the unit is under warranty.

2. Precautions


- Do not submerge the unit in a hot liquid, such as a soup simmering in a pot.

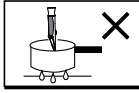


- Keep the unit away from any heat source, such as a cook stove.

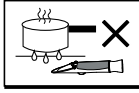

- Use water at ambient temperature (about 20°C) to clean the prism area after measuring a high-temperature solution. Do not use cold water (below 10°C).

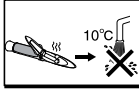


- Do not submerge the unit underwater for a prolonged period of time.

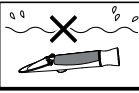

- The refractometer is a precise and sensitive optical instrument. Do not drop or subject to strong shock or excessive force.



- Store the unit in its original storage case in a dry, room temperature (0-40°C) environment away from direct sunlight.

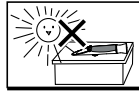

- When measuring a murky or dark solution, the boundary line may be difficult to make out or completely invisible. Hold the unit up to stronger light, such as direct sunlight or a light source for microscopes.




- The prism and daylight plate should be completely clean for each measurement. Oil-based solutions may leave a film-like residue. Clean the prism and daylight plate with alcohol or mild detergent diluted with water.



3. Measurement


1

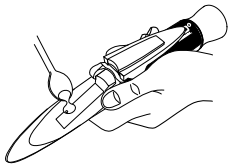

Put one or two drops of sample on the prism.


*Hold the refractometer between your fingers. Do not wrap your hand around the grip.

2

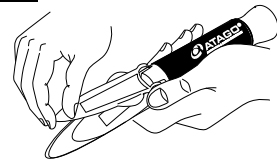


Close the daylight plate gently.

3

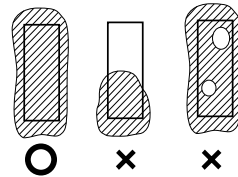

The sample must spread evenly over the prism surface. Air bubbles should be eliminated.

4

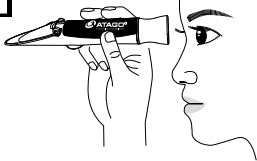


View the scale through the eyepiece. To focus, turn eyepiece in either direction until clear. Use the number printed on the side of the eyepiece as a reference for the position of the eyepiece when it is in focus.

5



Read the measurement value where the boundary line intersects the scale. (MASTER-50H scale pictured above.)

6

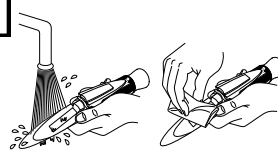

Wipe the sample off with a wet tissue or wash the prism with water.

After washing the prism, wipe off any remaining water with a dry soft tissue.

*Although the unit is rated IP65 dust-tight and resistant against water jets, it may be damaged from moisture penetration if left wet for extended periods of time.

* Although the MASTER-H series are excellent in heat resistance, be sure to drip extremely hot sample onto the prism surface after its temperature falls under 100°C. As soon as measurement is complete, wipe away the sample from the prism surface and daylight plate with tissues, and moreover wipe down those parts with tissues moistened with water.

* When jam, marmalade or the like is measured, be sure to wipe away sample from the prism surface and daylight plate with tissues immediately after measurement and again wipe down them with tissues moistened with water though the MASTER's prism is made of corrosion resisting tempered glass. If acid sample is left on the prism surface, the prism is corroded in a short time.

4. Automatic Temperature Compensation (ATC)

With each sample, the refractive index varies depending on the temperature. The position of the boundary line, seen through the eyepiece, will deviate based on the temperature at the time of measurement. With a non-ATC hand-held refractometer, manual calculation for temperature correction is needed. For example, at 10°C intervals, a variation of 0.6 to 0.8% can be seen for a standard sugar solution at 10%.

The MASTER-H series utilizes a built in Automatic Temperature Compensation feature so that the instrument's internal scale will shift automatically when the ambient temperature changes. This feature eliminates the need for temperature compensation charts. The refractometer and the sample should be at the same ambient temperature to ensure that the ATC feature is working correctly. To measure a heated or refrigerated sample, allow the sample to conform to the ambient temperature before taking measurements. Waiting 1 to 2 minutes after putting the sample onto the prism will ensure more accurate readings.

5. Verifying Calibration and Calibration Certification

[1] Verifying Calibration

To ensure measurement accuracy, the refractometer should be zero set prior to use each day. Periodic maintenance/service and calibration of your refractometer is recommended. The frequency at which calibration is performed will depend on each company's Standard Operating Procedures.

- ① Confirm that the prism is clean and free of scratches.
- ② Depending on the model, measure with distilled water or sucrose solution. Check that the boundary line is parallel to the memory lines.
- ③ Verify that the measurement value matches the expected value of the known calibration solution.

*The MASTER-93H and MASTER-100H can be calibrated with the Standard Liquid LK (available for purchase from ATAGO).

Part No.	Part Name
RE-110010	Sucrose Solution 10.0%(g/100g)
RE-110020	Sucrose Solution 20.0%(g/100g)
RE-110030	Sucrose Solution 30.0%(g/100g)
RE-110040	Sucrose Solution 40.0%(g/100g)
RE-110050	Sucrose Solution 50.0%(g/100g)
RE-110060	Sucrose Solution 60.0%(g/100g)
RE-99010	Standard Liquid LK(Brix about 73%)

[MASTER-50H]

Use distilled water. Measure the purified water at an ambient temperature at 20°C. Confirm the measurement value equals Brix 0.0% ±0.5%.

[MASTER-80H]

Prepare a 30%, 40%, 50%, or 60% sucrose solution. Apply the solution on the prism and look through the eye piece to make sure that the measurement value (the boundary line) is within ±0.5% of the concentration.

[MASTER-93H]

Prepare a 50% or 60% sucrose solution. Apply the solution on the prism and look through the eye piece to make sure that the measurement value (the boundary line) is within ±0.5% of the concentration.

[MASTER-100H]

Prepare a 60% sucrose solution. Apply the solution on the prism and look through the eye piece to make sure that the measurement value (the boundary line) is within ±0.5% of the concentration.

When the measurement value falls outside of the expected range, verify calibration according to section 6. Calibration.

[2] Calibration Certification

Based on ISO quality management system, Calibration Certificates can be ordered for any ATAGO refractometer. HACCP or GMP certification can also be provided at additional cost. Please contact an ATAGO distributor for more information.


6. Calibration

If the measurement value is incorrect after verifying calibration (section 5.) adjust the scale at an ambient temperature of 20°C. Standard calibration solutions for the MASTER-H series vary for each model. To adjust the scale during calibration, turn the scale adjustment screw located on the underside as shown in the figure to the right.



7. Quick and Easy sampling

Place approximately 0.3mL of sample on the front end (Figure ①) or the rear end (Figure ②) of the sample stage, and tilt the refractometer slightly in the proper direction to allow the sample to move over the prism. The sample liquid will spread evenly and the measurement value can then be read more quickly and easily. By eliminating the steps of lifting and closing the daylight plate when applying a sample, the operator can save much time when having to measure many samples daily. (This measuring method requires the sample to be low in viscosity.)

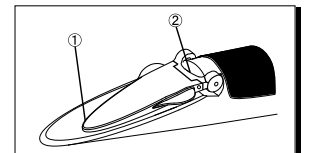

twilight

INSTRUMENTOS DE MEDICIÓN INDUSTRIAL

 LLÁMANOS

+52(81) 8115-1400 / +52 (81) 8173-4300

LADA Sin Costo:
01 800 087 43 75

E-mail:
ventas@twilight.mx

www.twilight.mx

 / [twilightsadecv](#)

 / [twilightsadecv](#)

 / [twilightsadecv](#)